


WEIDER®

TWO TONE *Body Toning System*

Model No. WECCBE09920

Serial No. _____

Write the serial number in the space above for reference.

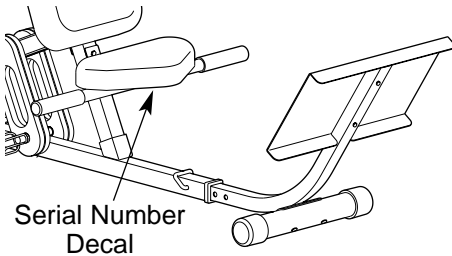

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, please call:


1-888-936-4266

Mon.–Fri. 8h00 until 18h30 EST
(excluding holidays).

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

USER'S MANUAL

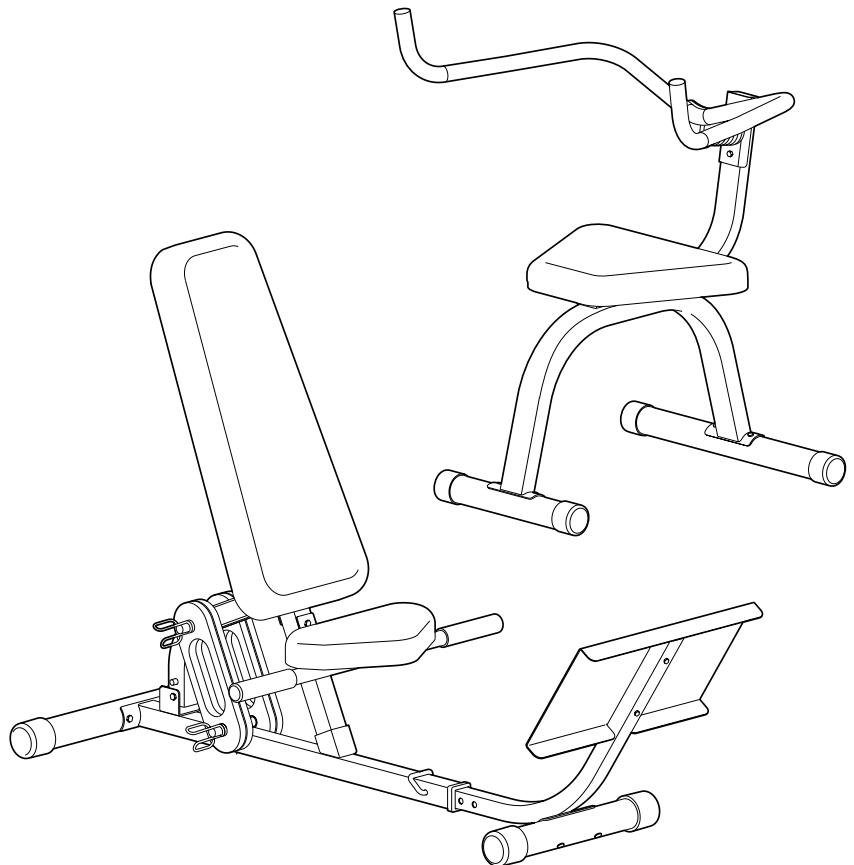

Visit our website at

www.weiderfitness.com


Before You Begin

Thank you for selecting the versatile WEIDER® TWO TONE BODY TONING SYSTEM. The TWO TONE BODY TONING SYSTEM is designed to help you develop every major muscle group of the body. Whether your goal is a shapely figure, dramatic increase in muscle size and strength, or a healthier cardiovascular system, the TWO TONE BODY TONING SYSTEM will help you achieve the specific results you want.

For your benefit, read this manual carefully before using the WEIDER® TWO TONE BODY TONING SYSTEM. If you have additional questions, call our Customer Service Department toll-free at 1-888-936-4266, Monday through Friday, 8h00 until 18h00 Eastern Time (excluding holidays). To help us assist you, please mention the product model number (WECCBE09920) and the serial number found on a decal attached to the body toning system (see the front cover of this manual).


Assembly—AB TILT & TONE

1. Press two 2" Round Outer Caps (23) onto each of the two Front Stabilizers (9) and the two Rear Stabilizers (not shown). **Note: The Front Stabilizers are shorter than the Rear Stabilizers.**

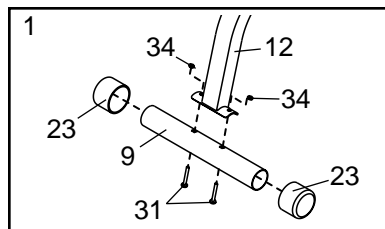

Attach a Front Stabilizer (9) to the Ab Leg (12) with two M8 x 63mm Carriage Bolts (31) and two M8 Nylon Locknuts (34). Attach a Rear Stabilizer (not shown) to the other end of the Ab Leg in the same manner.

2. Insert an M8 x 77mm Carriage Bolt (41) into the center hole in the Large Support Plate (14). Attach the Large Support Plate to the Large Seat (13) with two M6 x 16mm Button Screws (40).

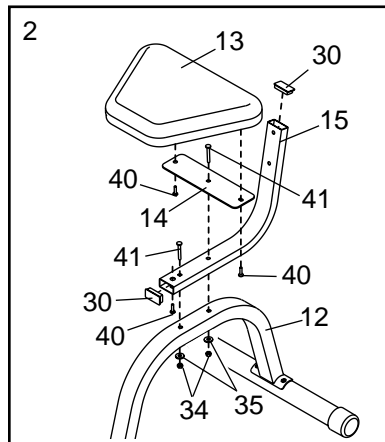


Press a 1" x 2" Inner Cap (30) into each end of the Seat Frame (15).

Insert an M8 x 77mm Carriage Bolt (41) into the indicated hole in the Seat Frame (15). Insert the M8 x 77mm Carriage Bolt in the Large Support Plate (14) through the rear hole in the Seat Frame.

Attach the Large Seat (13) to the Seat Frame (15) with the M6 x 16mm Button Screw (40).


Secure the two M8 x 77mm Carriage Bolts (41) to the Ab Leg (12) with two M8 Washers (35) and two M8 Nylon Locknuts (34).

3. Hold the Ab Frame (11) as shown. Slide two M8 x 40mm Button Bolts (33) through the Ab Frame and the Seat Frame (15). Secure the Bolts with two M8 Washers (35) and two M8 Nylon Locknuts (34).

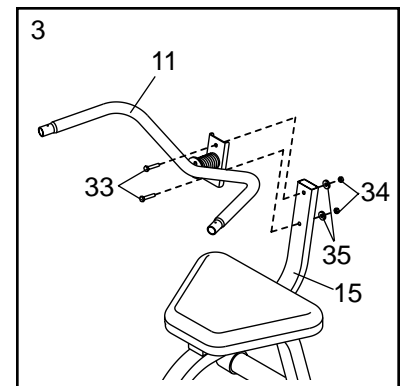


4. If there are M6 x 34mm Button Bolts (47) in the ends of the Ab Frame (11), remove them.

Wet the Ab Frame (11) and the inside of the Short Sleeves (48) with soapy water. Slide the two Short Sleeves onto the Ab Frame, making sure the angled ends face each other.

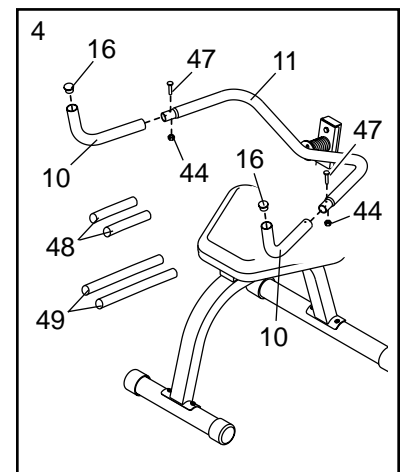

Hold the Ab Handlebars (10) as shown and attach them to the Ab Frame (11) with the two M6 x 34mm Button Bolts (47) and two M6 Nylon Locknuts (44). Press a 28.6mm Round Inner Cap (16) into each Ab Handlebar.

Wet the Ab Handlebars (10) and the inside of the Long Sleeves (49) with soapy water. Slide the two Long Sleeves onto the Ab Handlebars and the Ab Frame (11), so that they cover the M6 x 34mm Button Bolts (47) and the M6 Nylon Locknuts (44). Make sure the angled ends of the Long Sleeves are by the 28.6mm Round Inner Caps (16).

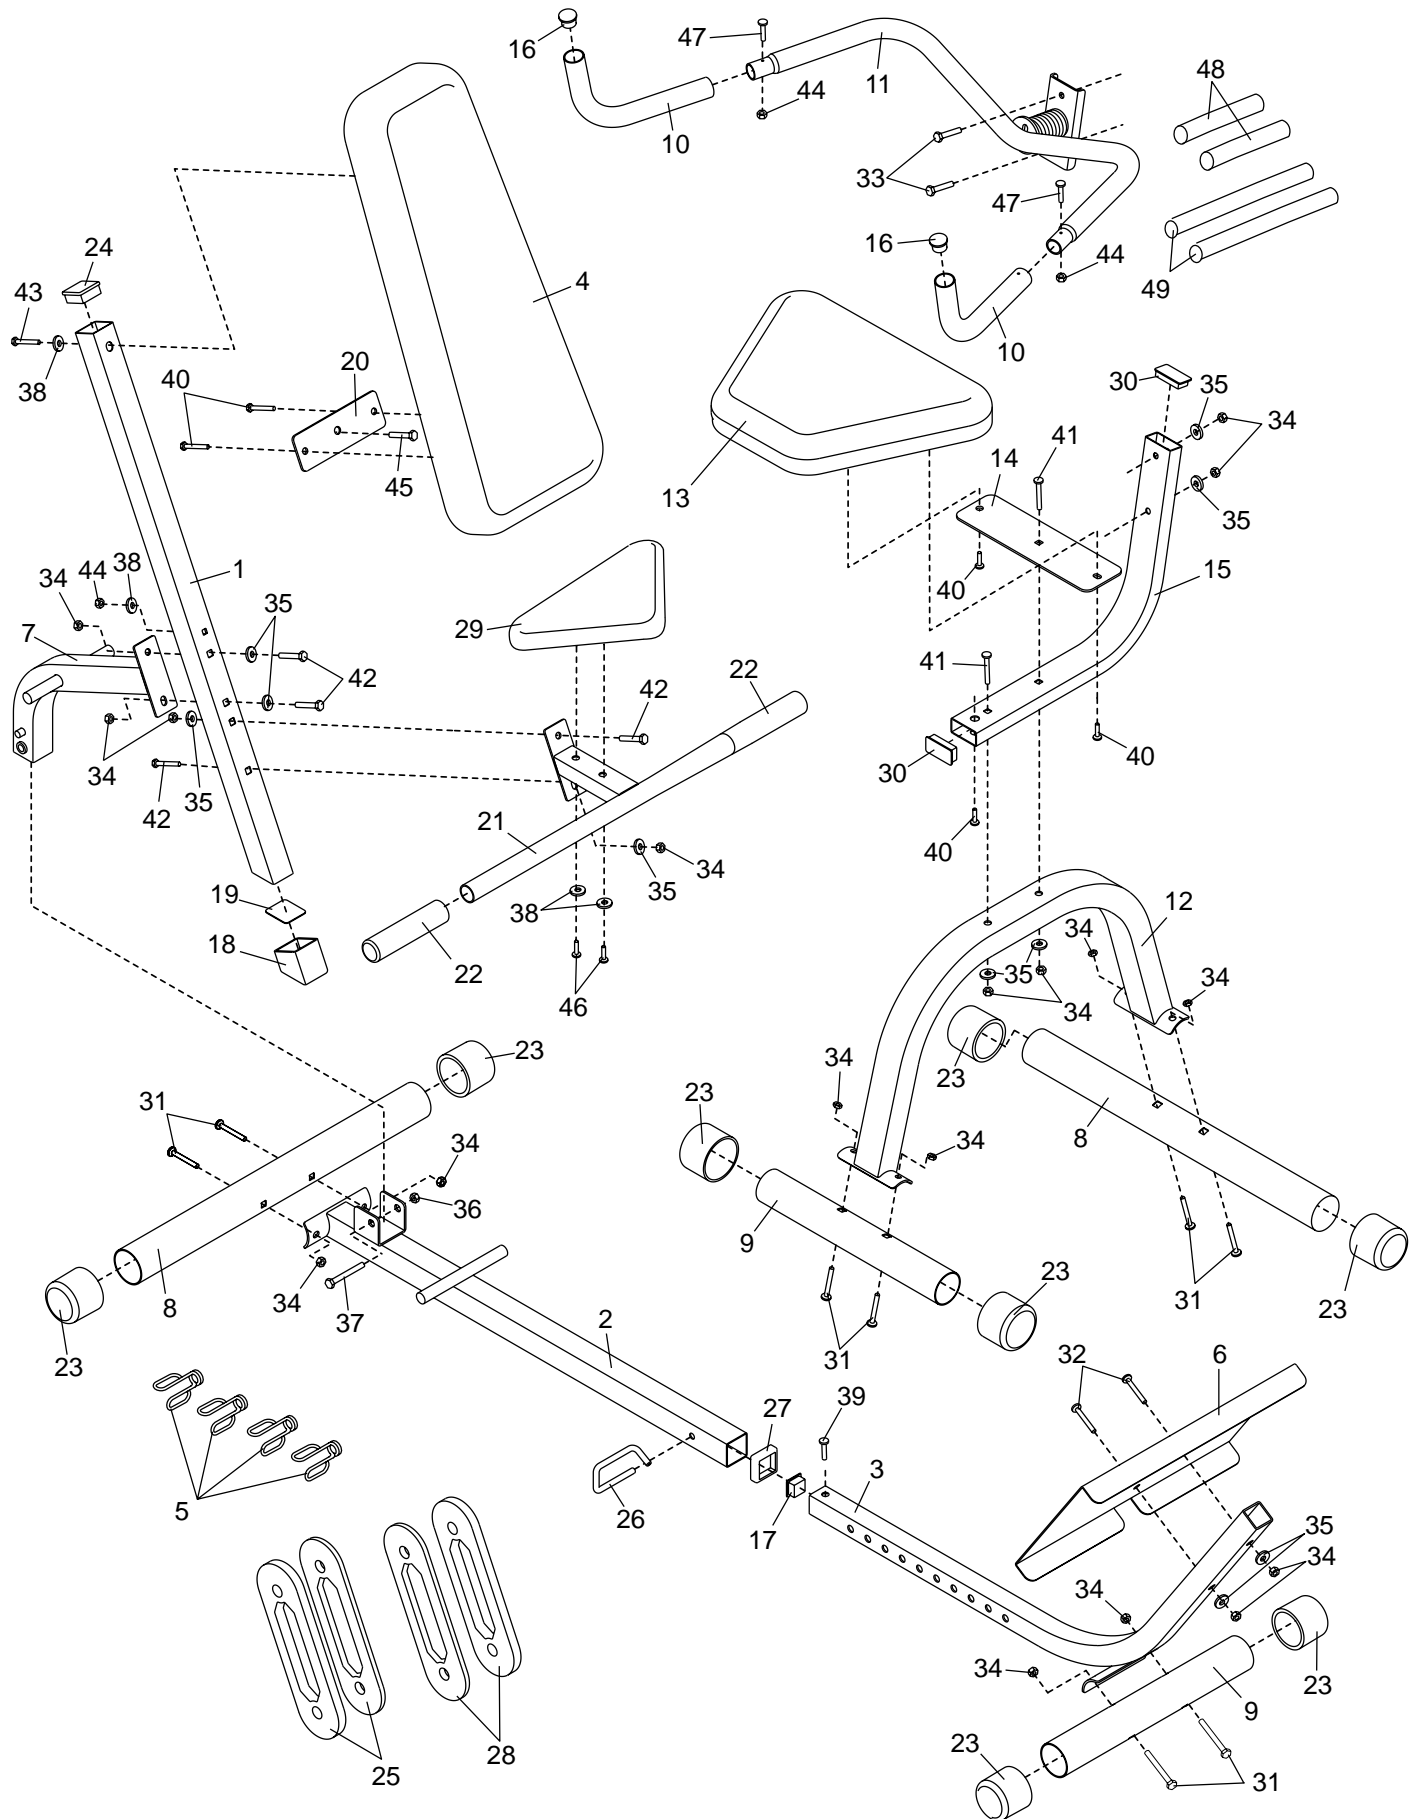

Exercise Guide

Ab Crunch



Side To Side*



Twist

Cross Over**



Criss Cross

Lower Ab Crunch



Crunch With Knee Lift

Circulate



Leg Press



Calf Raise



One Leg Squat



One Leg Side Squat



One Leg Squat with Leg Extension



One Leg Side Squat with Leg Extension



Included with the TWO TONE body toning system is an exercise video. This video will motivate and guide you through a 30-minute workout, helping you get the maximum benefit from the body toning system. The personal trainer will demonstrate the correct form for each of the exercises that can be performed with the AB TILT & TONE and the ROCK & TONE.

*This exercise can be performed leaning forward, upright, or leaning back.
**From the starting position, lean back (see Back Extension) and then to the finishing position.

Important Precautions

WARNING: To reduce the risk of serious injury, read the following important precautions before using the body toning system.

1. Read all instructions in this manual before using the body toning system. Use the body toning system only as described in this manual.

2. It is the responsibility of the owner to ensure that all users of the body toning system are adequately informed of all precautions.

3. The body toning system is intended for home use only. Do not use the body toning system in a commercial, rental, or institutional setting.

4. The body toning system is designed to support a maximum of 115 kg (250 lbs.).

5. Always make sure there is an equal amount of resistance on each side of the body toning system. Use only the included bands; do not add other bands.


WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

- 6. Keep children under 12 and pets away from the body toning system at all times.
- 7. Use the body toning system only on a level surface. Cover the floor beneath the body toning system to protect the floor.
- 8. Inspect and tighten all parts each time you use the body toning system. Replace any worn parts immediately.
- 9. Always wear athletic shoes for foot protection while exercising.
- 10. Keep hands and feet away from moving parts.
- 11. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.

Adjusting The Body Toning System

This section explains how the body toning system can be adjusted. Inspect and tighten all parts each time you use the body toning system. Replace any worn parts immediately. The body toning system can be cleaned with a damp cloth and a mild, non-abrasive detergent. Do not use solvents.


Adjusting the Press Plate

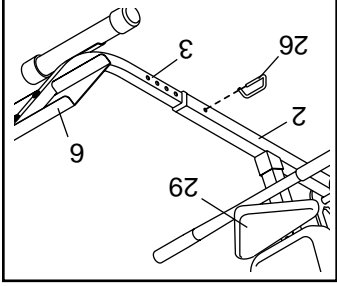

To adjust the distance between the Small Seat (29) and the Press Plate (6), remove the Adjustment Pin (26) from the Base (2). Slide the Adjustment Frame (3) into or out of the Base until the Press Plate is in the correct position for the exercise to be performed.

Note: For the correct starting positions, refer to the Exercise Guide section of this manual. Insert the Adjustment Pin into the indicated hole in the Base and a hole in the Adjustment Frame.

Adjusting the Resistance

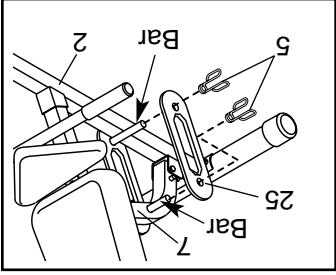

To change the amount of resistance, remove the four Spring Clips (5) from the Bench (25) to the bars on the Base (2) and the Pivot Frame (7). Secure the Bands with the four Spring Clips.


The 10-lb. Bands (28) can be attached in the same man-ner. Attach both sets of Bands for maximum resistance.

WARNING: Always place an equal amount of resistance on each side of the body ton-ing system.

Key No.	Qty.	Description	Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Backrest Frame	19	1	End Plate	38	4	M6 Washer
2	1	Base	20	1	Support Plate	39	1	M4 x 12mm Screw
3	1	Adjustment Frame	21	1	Handlebar	40	5	M6 x 16mm Button Screw
4	1	Backrest	22	2	Grip	41	2	M8 x 77mm Carriage Bolt
5	4	Spring Clip	23	8	2" Round Outer Cap	42	4	M8 x 52mm Button Bolt
6	1	Press Plate	24	1	38mm Square Inner Cap	43	1	M6 x 55mm Button Screw
7	1	Pivot Frame	25	2	25-lb. Band	44	3	M6 Nylon Locknut
8	2	Rear Stabilizer	26	1	Adjustment Pin	45	1	M6 x 50mm Carriage Bolt
9	2	Front Stabilizer	27	1	Slider Bushing	46	2	M6 x 42mm Button Screw
10	2	Ab Handlebar	28	2	10-lb. Band	47	2	M6 x 34mm Button Bolt
11	1	Ab Frame	29	1	Small Seat	48	2	Short Sleeve
12	1	Ab Leg	30	2	1" x 2" Inner Cap	49	2	Long Sleeve
13	1	Large Seat	31	8	M8 x 63mm Carriage Bolt	#	1	User's Manual
14	1	Large Support Plate	32	2	M8 x 43mm Carriage Bolt	#	1	Exercise Video
15	1	Seat Frame	33	2	M8 x 40mm Button Bolt			
16	2	28.6mm Round Inner Cap	34	18	M8 Nylon Locknut			
17	1	30mm Square Inner Cap	35	10	M8 Washer			
18	1	Angled Cap	36	1	M10 Nylon Locknut			
			37	1	M10 x 64mm Button Bolt			


Note: “#” indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

Part Identification Chart

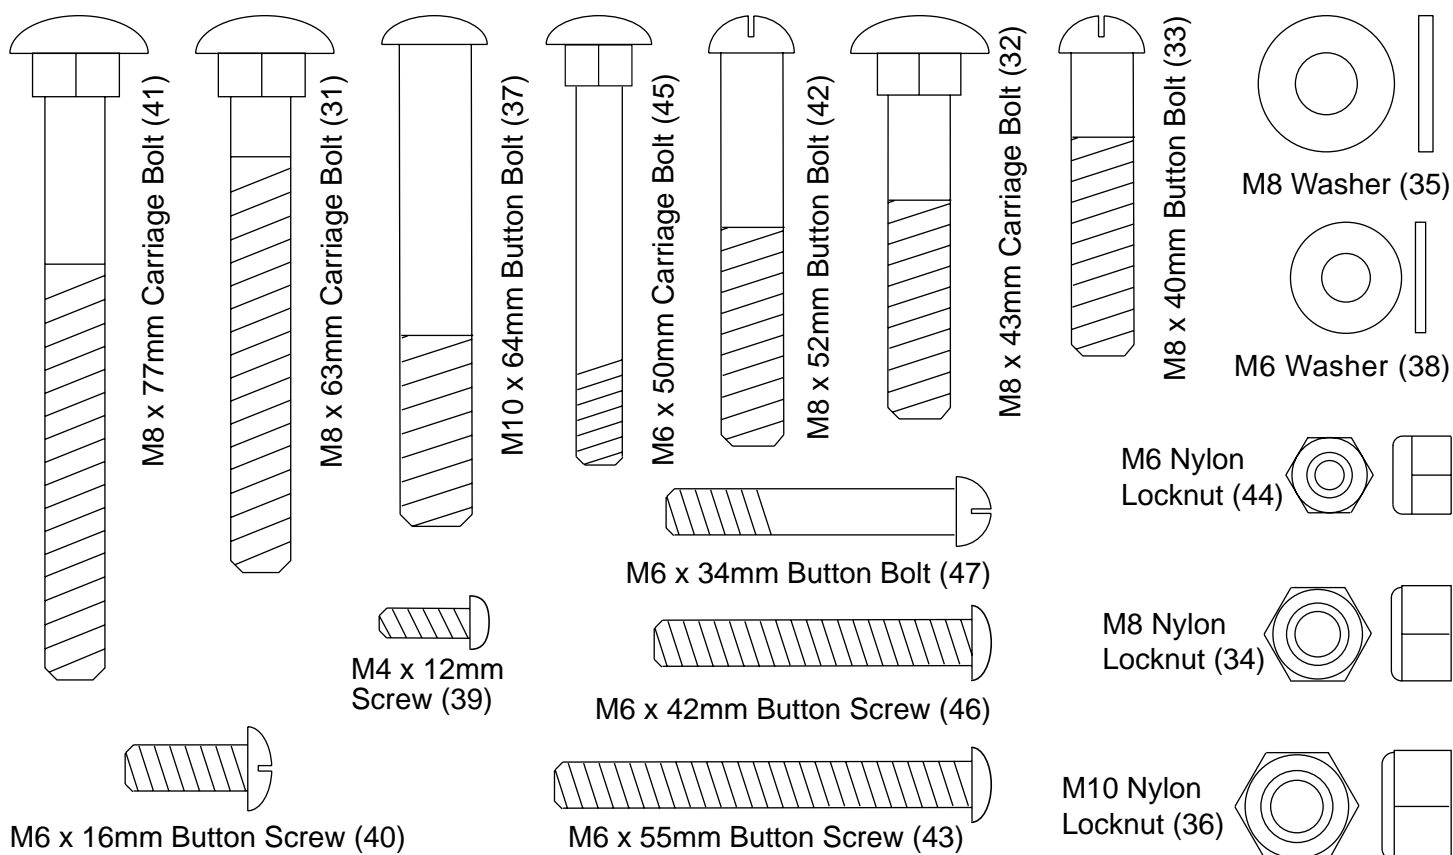


Assembly—ROCK & TONE

5. Attach a Rear Stabilizer (8) to the Base (2) with two M8 x 63mm Carriage Bolts (31) and two M8 Nylon Locknuts (34).

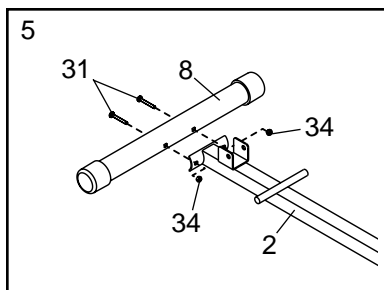


6. Attach a Front Stabilizer (9) to the Adjustment Frame (3) with two M8 x 63mm Carriage Bolts (31) and two M8 Nylon Locknuts (34).

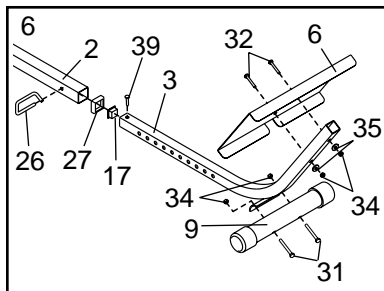

Press the 30mm Square Inner Cap (17) into the Adjustment Frame (3) and secure it with the M4 x 12mm Screw (39). Slide the Adjustment Frame through the Slider Bushing (27) and into the Base (2). Insert the Adjustment Pin (26) into the indicated hole in the Base and a hole in the Adjustment Frame.

Attach the Press Plate (6) to the Adjustment Frame (3) with two M8 x 43mm Carriage Bolts (32), two M8 Washers (35), and two M8 Nylon Locknuts (34).

7. Make sure the End Plate (19) is inside the Angled Cap (18). Press the Angled Cap onto the bottom end of the Backrest Frame (1). Press a 38mm Square Inner Cap (24) into the top of the Backrest Frame.

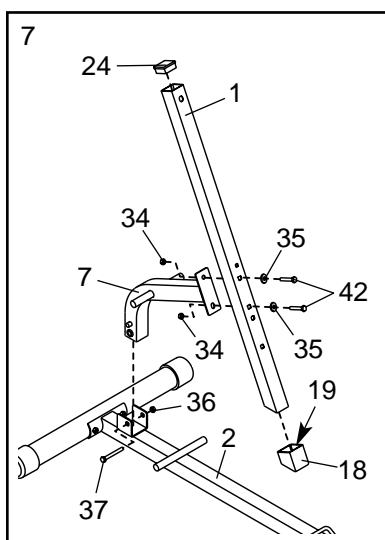


Attach the Pivot Frame (7) to the Backrest Frame (1) with two M8 x 52mm Button Bolts (42), two M8 Washers (35), and two M8 Nylon Locknuts (34).

Attach the Pivot Frame (7) to the Base (2) with an M10 x 64mm Bolt (37) and an M10 Nylon Locknut (36). **Do not over tighten the Locknut; the Pivot Frame must be able to pivot easily.**

8. Slide a Grip (22) onto each end of the Handlebar (21).


Attach the Handlebar (21) to the Backrest Frame (1) with two M8 x 52mm Button Bolts (42), two M8 Washers (35), and two M8 Nylon Locknuts (34).

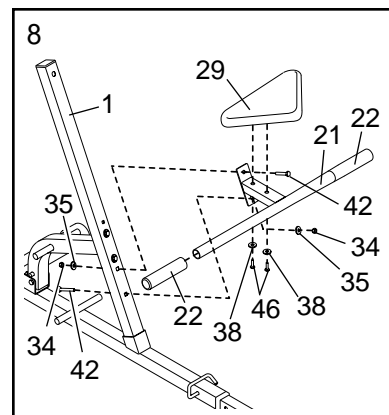

Attach the Small Seat (29) to the Handlebar (21) with two M6 x 42mm Button Screws (46) and two M6 Washers (38).

9. Insert an M6 x 50mm Carriage Bolt (45) into the center hole of the Support Plate (20).

Attach the Support Plate (20) to the Backrest (4) with two M6 x 16mm Button Screws (40).

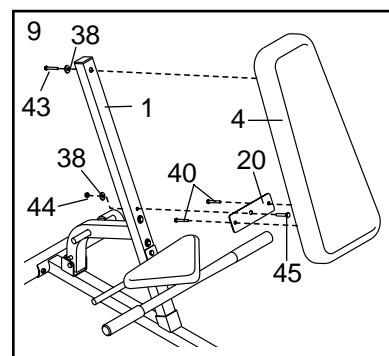

Attach the Backrest (4) to the Backrest Frame (1) with the M6 x 50mm Carriage Bolt (45), an M6 Washer (38), and an M6 Nylon Locknut (44).

Secure the Backrest (4) with an M6 x 55mm Button Screw (43) and an M6 Washer (38).

The use of the remaining parts are explained in Adjusting The Body Toning System.

Ordering Replacement Parts


To order replacement parts, call toll-free 1-888-936-4266, Monday through Friday 8h00 until 18h30 Eastern Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

- the MODEL NUMBER of the product (WECCBE09920)
- the NAME of the product (WEIDER® TWO TONE BODY TONING SYSTEM)
- the SERIAL NUMBER of the product (see the front cover of this manual)
- the KEY NUMBER and DESCRIPTION of the desired part(s) (see the PART LIST and the EXPLODED DRAWING inside of this manual).

WEIDER is a registered trademark of
ICON Health & Fitness, Inc.

Warning Decal

The decal shown below has been placed on the body toning system in the locations shown. If a decal is missing, or not legible, please call our Customer Service Department toll-free at 1-888-936-4266 to order a free replacement decal. Apply the replacement decal to the location shown.

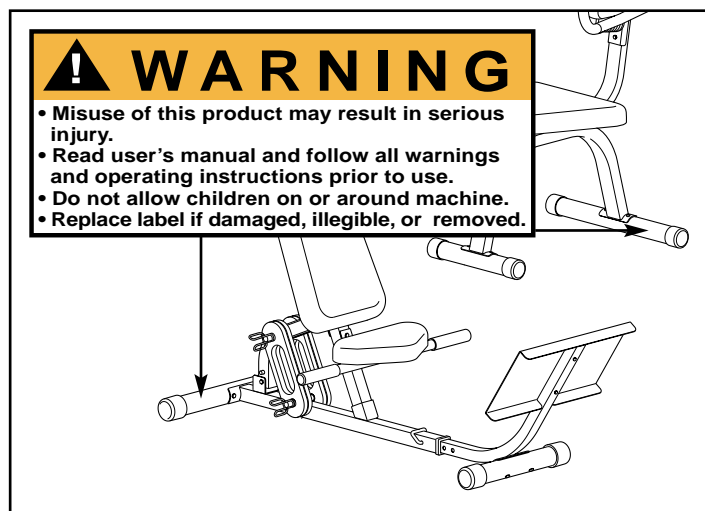

Limited Warranty

ICON OF CANADA, INC., (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, to products used for commercial or rental purposes, or to products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some provinces do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some provinces do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from province to province or so specified by the retailer of your equipment.

ICON OF CANADA, INC., 900 de l'Industrie, St. Jérôme, QC J7Y 4B8